


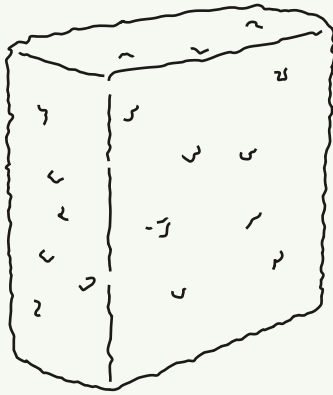


Freestanding Hedge




Parts

A

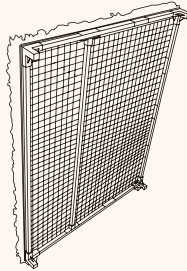


B x6

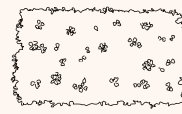


C x2 (6ft model only)



D x8

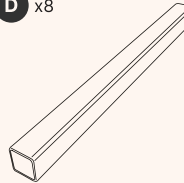


E x4 (7½ft model only)

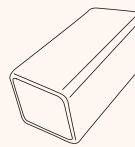


Hardware

1

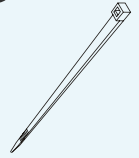


2

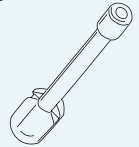


Instructions

Step 1

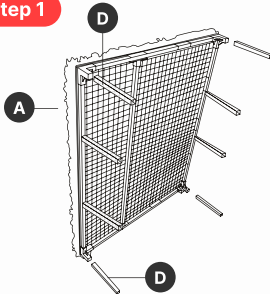


Place square **tubing D** into one of the large frames, then connect the second **face A** into the tubes.

Step 2

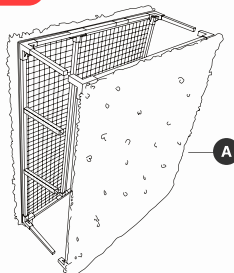


Step 4

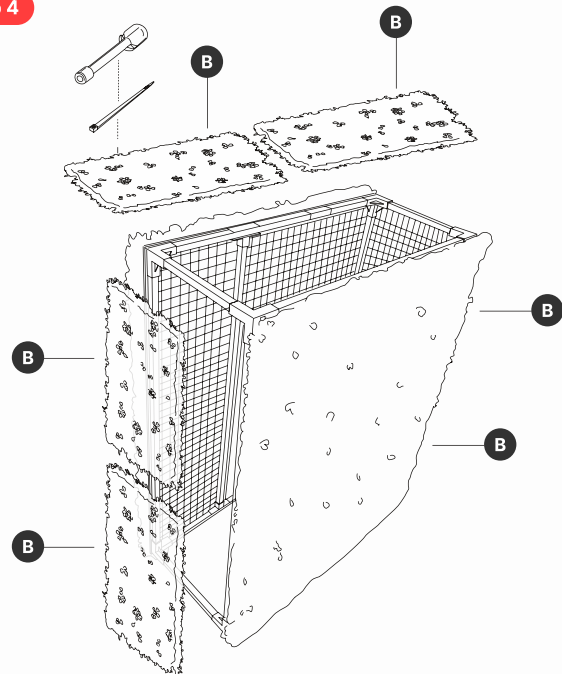

Use the provided tool to connect the leaf panels to the lugs on the plastic connectors (ensure you align the panel holes to the lugs on the frame). 6ft model uses 2 additional **C panels** on the sides. Use the device to push them firmly in place.

Step 3

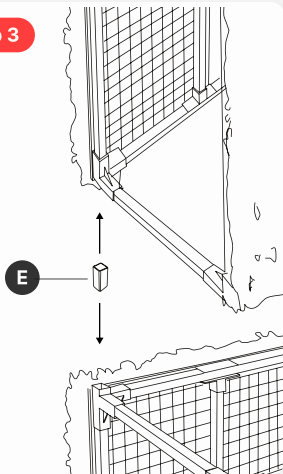

Extra Large Hedge Models

Place the **square tubing E** into one of top plugs of large **frame A**. Connect the two completed frames one on top of the other

Tip #1

Please ensure you firmly insert all poles into their holes, otherwise the hedge pieces will not easily connect. If need be you can easily zip tie the hedge panels if you cannot stretch them.

Tip #2

Once completed you can ruffle the foliage and lightly "fluff" with your fingers to reduce the join lines.